

nüvi™ 310/360

personal travel assistant



quick reference guide

This guide provides short instructions for various nüvi operations. Fold and keep this guide in the pocket of your nüvi carrying case.

WARNING: See the owner's manual for product warnings and other important information.

Turning the nüvi On or Off

Press and hold the **Power** button on the top of the nüvi.

Charging the nüvi

To charge the nüvi, use one of the following methods:

- Connect the nüvi to the suction mount and the 12/24-Volt car adapter.
- Connect the USB cable to the nüvi and your computer.
- Connect the AC adapter to the nüvi and a wall outlet (included with the nüvi 360).

Acquiring Satellites

Before the nüvi can find your current location and navigate a route, you must do the following:

1. Go outdoors to an open area, away from tall buildings and trees.
2. Flip up the GPS antenna on the back of the nüvi, so that it is parallel to the ground.
3. Turn on the nüvi. Acquiring satellite signals can take a few minutes.




The bars indicate satellite strength. When the bars are green, the nüvi has acquired satellite signals; now you can select a destination and navigate to it.

Mounting on the Windshield

Check your state and local traffic laws before mounting. Currently, state laws in California and Minnesota prohibit drivers from using suction mounts on their windshields while operating motor vehicles. Other Garmin dashboard or friction mounting options should be used. See the owner's manual for more details.

1. Plug the power cable into the back of the mount. Plug the other end into a 12/24-Volt receptacle in your vehicle.
2. Clean and dry your windshield and the suction cup with a lint-free cloth. Place the suction cup on the windshield.
3. Flip the lever back, toward the windshield.
4. Flip up the GPS antenna. Fit the bottom of your nüvi into the cradle.
5. Tilt the nüvi back until it snaps into place.

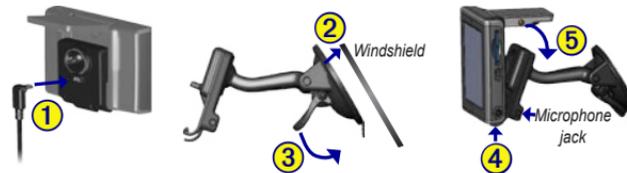

To remove your nüvi from the cradle, press the small tab on the bottom of the cradle up, and tilt the nüvi forward.

Do not leave your GPS unit exposed in an unattended vehicle on a hot day. To prevent damage, remove it from the vehicle; or store it out of direct sunlight, such as in the glove box. See the specifications in the owner's manual.

Finding Your Destination

1. On the Menu page, touch **Where to**.
2. Search for your destination. Touch the arrows for more choices.
3. Touch **Go**.

Following Your Route

Follow the route to your destination using the Map page.

- The vehicle icon shows your location.
- Your route is marked with a purple line.
- Follow the arrows as you take turns.
- A checkered flag marks your destination.



On the Menu page, you can touch **View Map** to open the Map page. Touch and drag the map to view different areas.

Saving Your Current Location

1. On the Menu page, touch **Where to** > **My Locations** > **My Current Location**.
2. Touch **Save**, enter a name, and touch **Done**. The place is saved in **My Locations** > **Favorites**.

Saving Places That You Search For

1. After you search for a place you want to save, touch **Save**.
2. Touch **OK**. The place is saved in **My Locations** > **Favorites**.

Finding Saved Places

1. On the Menu page, touch **Where to** > **My Locations** > **Favorites**.
2. Select a place.
3. Touch **Go**.

Adding a Stop to Your Route

1. When navigating a route, touch **Where to** on the Menu page.
2. Search for a location at which you want to stop before your final destination.
3. Touch **Go**.

Taking a Detour

When navigating a route, touch **Menu** > **Detour**.

Stopping the Route

When navigating a route, touch **Menu** > **Stop**.

Tips and Shortcuts

- To quickly return to the Menu page, touch and hold **Back**.
- To jump from any page back to the player page when you are listening to music or an audio book, quickly press the **Power** button twice.
- To extend the battery life, close the GPS antenna when you do not need GPS signals. You can also decrease the brightness.
- To access the Quick Settings page, quickly press and release the **Power** button. You can also touch  on the Menu page.
 - To adjust the volume or brightness, move the sliders.
 - To prevent accidental screen taps, touch **Lock**. To unlock the screen, press the **Power** button.
- To learn more about the nüvi Bluetooth® technology or Travel Kit features, touch the **Help** button on the appropriate screen.

Locking Your nüvi

To help prevent theft of the nüvi, apply the Garmin Lock™ sticker to the inside of a vehicle window, and do the following:

- Flip up the GPS antenna.
- On the Menu page, touch  **Settings > System**.
- Touch the button next to **Garmin Lock**. Touch **OK**.
- Enter a four-digit PIN. Touch **Yes** to accept the PIN.
- Touch **OK**. Drive to a security location, and touch **Set**.
- Each time you turn on the nüvi, enter the four-digit PIN or drive to the security location (with the antenna up).

NOTE: If you forget your PIN and your security location, you must send your nüvi to Garmin to get it unlocked.

Using Hands-Free Features

Hands-free phone features on the nüvi are only available if your phone supports that feature using Bluetooth technology (for example, phone book, voice dial, and call waiting). The first time you use the nüvi and your phone together, you must “pair” them. After the initial pairing, the two devices can connect automatically each time you turn them on.

Pairing Your Phone Using the nüvi Settings

- Confirm that your phone is supported by the nüvi. (See www.garmin.com/bluetooth.)
- On the Menu page, touch  **Settings > Bluetooth**.
- Ensure that the Bluetooth button is set to **Enabled**.
- Touch **Add** (or **Change**, if you already added).
- If adding, set your phone to **Find Me/Discoverable** mode, and touch **OK** on the nüvi. Select your phone on the list. Enter passkey **1234** on your phone, when prompted.

OR

If changing, select your phone and touch **OK**, or touch **Add Device** and **OK**.

- If the pairing is successful, the  Phone icon appears on the nüvi Menu page. This shows that the two devices are connected.

Calling a Number

- On the Menu page, touch  **Phone > Dial**.
- Enter the number, and touch **Dial**.
- To end the call, touch , and then touch **End Call**.

If you are calling a number that requires that you enter information using a keypad during the call (for example, entering a password for your voicemail), do the following:

- During the call, touch  **> Call Options > Touch Tones**.
- Enter the information. Touch **Back** twice, when finished.
- To end the call, touch **End Call**.

Calling a Place

- On the Menu page, touch  **Phone > POI Dial**.
- Search for the point of interest (POI) that you want to call.
- Touch **Dial**.
- To end the call, touch , and then touch **End Call**.

Receiving a Call

- When you receive a call, a message appears on the nüvi. Touch **Answer**.
- To end the call, touch , and then touch **End Call**.

Using Call Waiting

If you get a call waiting call, the nüvi displays a message. Touch **Answer**. The first call is put on hold.

To switch between calls:

- During the call, touch  **> Switch To**.
- Touch **End Call** to hang up; this does not disconnect the call on hold.

Using the Travel Kit

The Travel Kit includes several functions that are helpful when you are traveling (for example,  MP3 Player,  Audible Book Player, and  Currency Converter). On the Menu page, touch  **Travel Kit**. Touch the arrows to view more items. Touch **Help** to learn more about each feature.

Using Traffic Features

If you are using a traffic receiver, and you are receiving traffic data, you can view and avoid traffic incidents. For more information about Garmin FM traffic receivers, visit www.garmin.com/traffic.

Connecting an FM Traffic Receiver

- Place your nüvi into the mount, and plug it into the 12/24-Volt adapter.
- Plug the mini-USB cable from the FM traffic receiver into the USB connector on the side of the nüvi.

Viewing Traffic Incidents

On the Menu page, touch  to display a list of traffic incidents.

Avoiding Traffic


The Map page displays  or  in the lower-right corner of the screen when there is a traffic incident on your current route or road. Touch  or , select an item to view details, and then touch **Avoid**.

Resetting the nüvi

If the nüvi screen stops functioning, turn the nüvi off and on again.

If this does not help, do the following:

- Disconnect the nüvi from external power.
- Flip up the GPS antenna.
- Press the **Reset** button.
- Connect the nüvi to a power source. The nüvi should automatically turn back on and operate normally.

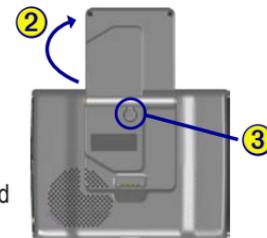

More Information

For more information about the nüvi, refer to the *nüvi 310/360 Owner's Manual* in one of the following locations:

- Included in the box.
- Go to www.garmin.com/products/nuvi310 or www.garmin.com/products/nuvi360; click **Manuals**, and then click **Download**. You must have Adobe Reader installed on your computer to view this manual.

For information about accessories, go to the Web sites shown above. You can also contact your Garmin dealer to purchase nüvi accessories.

Garmin® is a registered trademark, and nüvi™ is a trademark of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. RDS-TMC Traffic Information Services France © ViaMichelin 2006.