

nüvi

personal travel assistant

quick reference guide



Mounting Your nüvi

For a tight grip, clean and dry your windshield before mounting the suction cup.



Place the suction cup on the windshield. Flip the lever back, toward the windshield.



Open the antenna. Fit the bottom of your nüvi into the cradle. Tilt your nüvi back until it snaps in place. If necessary, rotate the cradle.

Plug the small end of the cable into the back of the mount; plug the other end into a 12/24-Volt receptacle in your vehicle. To remove your nüvi from the cradle, press the small tab on the bottom of the cradle up and tilt the nüvi forward.


Warning: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle with the nüvi installed to place and secure the device so it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause personal injury in the event of an accident.

Notice to State of California Drivers: California Vehicle Code Section 26708 (a) (1) provides that drivers in California should not use suction mounts on their windshield or side or rear windows. Other Garmin dashboard or friction mounting options should be used. For available accessories, refer to the Garmin Web site at www.garmin.com. Also, refer to the *nüvi Owner's Manual* for instructions on using the included mounting disk with the suction cup mount.

Configuring Your nüvi

To turn on your nüvi, press and hold the **Power** button on the top of the unit. Follow the on-screen instructions to set up your nüvi. You only have to do this once.

Finding Your Destination

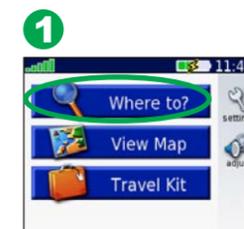

Touch **Where to?**




Select a category. Touch the arrows to see more categories.



Select a destination. Touch the arrows to see more places.



Touch .

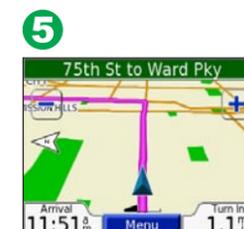

Enjoy the route!

Following Your Route

Follow the route to your destination using the Map page. As you travel, the nüvi guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, the nüvi recalculates the route and provides new route instructions.



Your route is marked with a magenta line.



Follow the arrows as you take turns.



A checkered flag marks your destination.

Viewing the Map Page

From the Menu page, touch **View Map** to open the Map page. The position icon shows your location. Touch and drag the map to view different areas.

Touch to zoom out.

Touch **Menu** to return to the Menu page.

Touch **Arrival** or **Speed** to open the Trip Information page.



Map Page while Navigating a Route

Touch the text bar to open the Current Route page.

Touch to zoom in.

Touch **Turn In** to open the Next Turn page.

Adding Stops to Your Route

You can add a stop (via point) to your route. The nüvi gives you directions to the via point and then to your final destination. With a route active, touch **Menu** > **Where to?**



Search for the extra stop.




Touch .




Touch **Yes** to add this stop before your destination.

Setting a Home Location

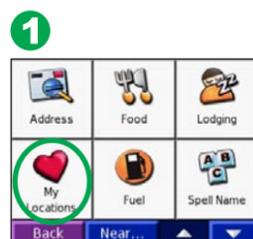

Touch **Where to?** > **My Locations**.

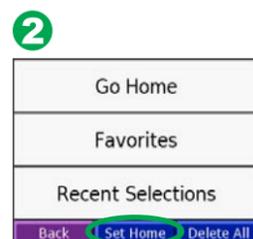

Touch **Set Home**.



Select an option.

Saving Places You Find



After you have found a place you want to save, touch **Save**.




Touch **OK** in the pop-up window. The place is saved in **My Locations** > **Favorites**.

Finding Saved Places



From the Menu page, touch **Where to?** > **My Locations** > **Favorites**.

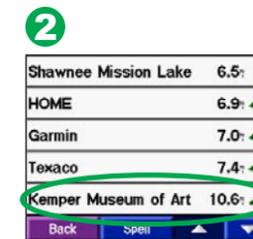

Select a place.



Touch .

Finding an Address

From the Menu page, touch **Where to?** > **Address**.



Select a state.



Type the address number and touch **Done**.



Type the street name until a list of streets appears or touch **Done**.



Select the street.




Select a city, if necessary.



Select the address, if necessary. Touch **Go!**

Listening to MP3 Files

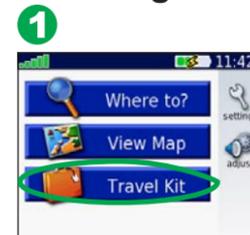

From the Menu page, touch **Travel Kit**.



Touch **MP3 Player**.



Touch **Browse**.



Select a category.



To play the entire category, touch **Play All**. To play one song, touch the title.



Touch **Back** to exit the MP3 page to view other pages, such as the map.

Touch to adjust the volume.

Tap to go to the beginning of the song; touch and hold to skip back.

Tap to skip to the end of the song; touch and hold to skip ahead.

Touch to pause the song.

Touch to repeat. Touch to shuffle.

Using the Quick Settings

To access the Quick Settings, quickly press and release the **Power** button. Move the sliders to adjust the volume and brightness. You can also touch on the Menu page to adjust the levels.



Touch **Lock** to prevent accidental screen taps. To unlock the screen, press the **Power** button and touch **Unlock**.

nüvi Tips

- To quickly return to the Menu page, press and hold the **Back** button.
- Touch the **Help** button to learn more about the nüvi's Travel Kit features.

Loading Items to Your nüvi

Connect the mini-USB connector to the side of the nüvi. Connect the larger end of the cable to an available USB port on your computer.

Double-click the My Computer icon on your computer's desktop. Two new Removable Disk drives appear in your list of drives: "nüvi" and "nüvi sd." "nüvi" is the available storage in the nüvi's internal memory. "nüvi sd" is the SD card inserted in your nüvi. If you do not have an SD card inserted in your nüvi, the "nüvi sd" drive does not appear in the list.

Double-click one of the nüvi drives to open it. Copy and paste files into the drive.




Playing Audible Books

Your nüvi provides sample Audible books, which are only portions of the book. Purchase full books from Audible.com at <http://garmin.audible.com>.



From the Menu page, touch **Travel Kit** > **Audible Book Player**.

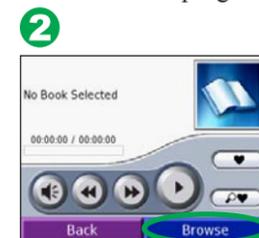

Touch **Browse**.



Touch a book title.



Touch .

Touch to adjust the volume.

Tap to jump back. Tap to skip ahead. Press and hold to move more quickly.

Touch to pause the book.

Touch the book cover art to view book information.

Using Bookmarks

To create a bookmark, touch and **Bookmark**. To view your bookmarks, touch and then touch a bookmark. Touch to listen to the book from the bookmark.

Using an FM TMC Traffic Receiver

Using a Garmin FM TMC Traffic Receiver, the nüvi can receive and use traffic information broadcast over the FM Radio Data System. For more information about the GTM 10 FM TMC Traffic Receiver, visit <http://www.garmin.com/products/gtm10>.

Connecting the GTM 10 to Your nüvi

Place your nüvi in the mount and plug it into the 12-volt adapter. Plug the USB cable from the GTM 10 into the USB cable connector on the side of the nüvi

Viewing Traffic Events

From the Menu page, touch to display a list of traffic events. The traffic symbols appear on the Map as well.



Using the Travel Kit

Your nüvi provides a Travel Kit with several features that are helpful when you are traveling.




From the Menu page, touch **Travel Kit**.



Touch the arrows to view all items in the Travel Kit. Touch the item you want to open.

Converting Currency

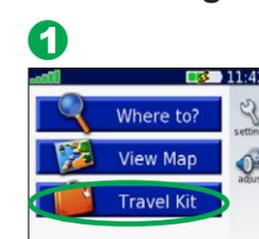

From the Menu page, touch **Travel Kit**.



Touch and then **Currency Converter**.



Select **From** and **To** currencies. Touch the blank field and enter the number. Touch **Done**.

Garmin Language Guide

The Garmin Language Guide puts the data from Oxford's multilingual resources and five bilingual dictionaries in the palm of your hand. A trial version of the Garmin Language Guide is provided. To purchase the Garmin Language Guide accessory, go to the Garmin Web site at <http://www.garmin.com/products/nuvi/> and click the **Accessories** link. You can also contact your Garmin dealer to purchase nüvi accessories.

More Information

For more information, refer to the English owner's manual located on your "nüvi" drive and on the Garmin Web site at <http://www.garmin.com/products/nuvi/>. Click the **Manuals** link and then select **Download**.